• Backlight Savings

You can set when you want the display backlight to switch off after PocketRave has been idle for some time.

1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Setting."
3. Press the Joystick down to confirm.
4. Slide the Joystick right or left to select the menu item "Backlight."
5. Press the Joystick down to confirm.
6. Slide the Joystick right or left to select the desired time. (0 seconds means the backlight will not be turned off.)
7. Press the Joystick down to confirm.

• Equalizer Options

1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Setting."
3. Press the Joystick down to confirm.
4. Slide the Joystick right or left to select the menu item "EQ."
5. Press the Joystick down to confirm.
6. Slide the Joystick right or left to select an equalizer option.
7. Press the Joystick down to confirm.

• Record Setting

Use this setting to adjust the recording quality. The smaller the sampling rate, the longer the recording time.

1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Setting."
3. Press the Joystick down to confirm.
4. Slide the Joystick right or left to select the menu item "Rec Bit Rate."
5. Press the Joystick down to confirm.
6. Slide the Joystick right or left to select a bit rate.
7. Press the Joystick down to confirm.

• Deleting a file

1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Delete."
3. Press the Joystick down to confirm.
4. Slide the Joystick right or left to select the menu item "Music," "Voice" or "Exit."
5. Press the Joystick down to confirm.
6. The display shows the filename and the question "You want to delete the file?"
7. Slide the Joystick right or left to select Yes, No, or Exit.
   Yes: delete the actual file / No: show the next filename / Exit: exit the menu
8. Press the Joystick down to confirm

• Checking Remaining Battery Capacity

Turn PocketRave on and look at the battery symbol on the right hand corner of the display screen.

• Checking Amount of Free Memory

1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Info."
3. Press the Joystick down to confirm.
4. Press the Joystick down again to exit.

www.actiontec.com

PocketRave Music Player Manual

Thank you for purchasing the Actiontec PocketRave music player! With PocketRave, you can listen to music files, record from voice, and record from and listen to the radio – all in one lightweight and portable device.

CHAPTER 1: BASIC INSTRUCTIONS

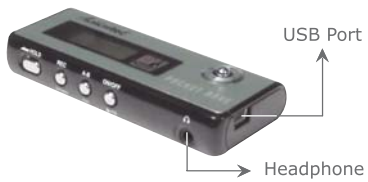

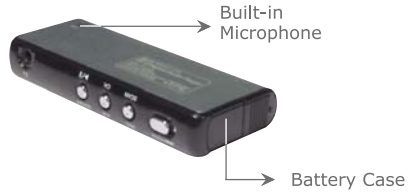

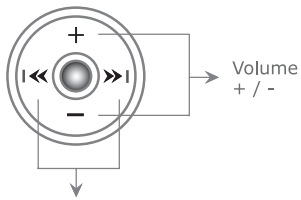

• Powering On and Off

Insert the supplied AAA battery into the battery holder. Press the "On/Off" button for 3 seconds to turn the power on or off.

• Entering the Menu Screen

Press the Joystick down to access the Menu screen. The Menu screen gives you options to select Music, Voice, FM, Setting, Delete, and Memory Info.

CHAPTER 2: ADDING AND PLAYING MUSIC FILES

• PocketRave Setup for Your Operating System

1. If you are running Windows ME/2K/XP or Macintosh OSX 10.2, the drivers are already built into the operating system. You can skip this step.
2. If you are running Windows 98 SE on your computer, you must install the PocketRave driver first. Please go to the support section on www.actiontec.com and follow the instructions for downloading the driver.

• Adding Music Files

1. Connect the smaller end of the supplied USB cable to the USB port located on the right side of PocketRave. Connect the other end of the USB cable to your computer.
2. You will see a popup screen saying that your computer detected a "USB Mass Storage Device."
3. After this screen appears, go to My Computer and open the Removable Disk folder. Then locate the MP3, WMA, or WAV files on your computer that you want to add to PocketRave.
4. Drag and drop these music files into the Removable Disk folder.
5. Once the files have been completely copied into the Removable Disk folder, you may disconnect the USB cable from PocketRave. You've successfully added your music files to PocketRave!

Note: *If you are running Macintosh OSX 10.2, please go to the support section on www.actiontec.com for instructions.*

• Playing Music Files

1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Music."
3. Press the Joystick down to confirm.
4. Press the "Play" button to start playing your music files.
5. Press the "Play" button again to pause.

• Volume

Slide the Joystick up or down to adjust the volume level.

flip this page to continue

• Skipping Tracks

Slide the Joystick right to skip to the next track. Slide the Joystick left to go back to the previous track.

• Rewinding and Fast-Forwarding

Slide and hold the Joystick right to fast-forward through your track. Slide and hold the Joystick left to rewind through your track.

• Play Mode Settings

You can play your music files in the following ways:
Norm: Normal playback, no repeat
Repeat: Listen to one file repeatedly
Repeat all: Listening to all files repeatedly
Random: Listening to your files in random sequence.
Random & Repeat: Listening to your songs in random sequence repeatedly

To select a play mode setting:
1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Setting." Press the Joystick down to confirm.
4. Slide the Joystick right or left to select the menu item "Repeat."
5. In the following menu, choose one of the playing methods from above.

CHAPTER 3: PLAYING AND RECORDING VOICE FILES

• Recording From Voice

1. Press the "REC" button for 2 seconds.
2. The unit is in recording mode. Position the recording source close to the built-in microphone, located on the back, left-hand corner.
3. Press the "REC" button again to stop recording.
4. To return back to music mode, press the Joystick down for 3 seconds.

• Playing Recorded Voice Files

1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to the menu item "Voice."
3. Press the Joystick down to access recorded voice files.
4. Press the "Play" button to start the playback. Press the "Play" button again to pause.
5. To return back to music mode, press the Joystick down for 3 seconds.

CHAPTER 4: FM RADIO

• Getting to FM Radio

1. Press Joystick down to enter the menu screen.
2. Slide the Joystick right or left to the menu item "FM."
3. Press the Joystick down to confirm.

• Auto Scan & Saving Stations

With the Auto Scan feature, PocketRave automatically finds the available radio stations in the area. When PocketRave finds an available station, it saves that station in a preset slot (numbered from 1 to 20) for easy access later on.
Note: *for best scan results, please use Auto Scan in an open, outdoor area.*
1. Enter FM radio mode (see "Getting to FM Radio").
2. Press the "Scan" button once to Auto Scan for radio stations.
3. When PocketRave has finished scanning, the stations will be saved from P1-P20 (Preset 1 to Preset 20).

• Manual Scan

To find radio stations manually:
1. Enter FM radio mode (see "Getting to FM Radio.")
2. Slide the Joystick right or left to manually increment or decrement the station no. Or, slide and hold the Joystick right or left to scan for the next available station.

• Accessing Preset Stations

1. Enter FM radio mode (see "Getting to FM Radio.")
2. Press the "Ch" button to set the FM mode to "Channel"
3. Once you see "Channel" on the display screen, slide the Joystick right or left to go through the 20 preset stations.

• Saving Radio Stations

You can save your favorite radio stations in preset slots for easy access later on.
1. Go to the preset station number you want to save to or override, ie P2. (See "Accessing Preset Stations.")
2. Press the "Ch" button until you see "Set" on the display screen.
3. Slide the Joystick right or left to scan to the station you want to save.
4. Press the "Rec/Scan" button to save your radio station to the preset number.

• Recording Radio

1. Go to the station you want to record from.
2. Press the "Rec" button for 3 seconds to activate recording.
3. Hold the "Rec" button from when you want to start recording to when you want to stop.
4. The recorded ration portion is saved as the last WAV file and is accessible under the Music mode.

CHAPTER 5: LANGUAGE EDUCATION/A-B SECTION REPEAT

With A-B section repeat, you can specify any section of your music file(s) to be played repeatedly.
1. To set the start point of the repeating section: Play the music file you want to repeat. While you're listening to it, press the "A-B" button briefly at the start point of the repeating section.
2. To set the end point of the repeating section: While you're listening to your music file, press the "A-B" button briefly at the end point of the repeating section. The section from A to B will be continuously repeated now.
3. To get out of section repeat: Press the "A-B" button again. Your music file will resume playing from where it was cut off.

CHAPTER 6: CONFIGURING POCKETRAVE

• Hold

You can keep your current settings and disable all button functions by using the Hold feature. To do so, slide the "Hold" button to the left. To get out of this mode, slide the "Hold" button back to the right.

• Auto Power Off

You can set when you would like PocketRave to automatically power off after it has been idle for some time. By default the Power Off feature is set to 0 seconds and PocketRave does not turn off automatically. To change this setting:
1. Press the Joystick down to enter the menu.
2. Slide the Joystick right or left to select the menu item "Setting."
3. Press the Joystick down to confirm.
4. Slide the Joystick right or left to select the menu item "Power Off."
5. Press the Joystick down to confirm.
6. Slide the Joystick right or left select between 1, 2, 5 and 10 minutes or 0 seconds to disable this mode. (0 seconds means that PocketRave will not power off.)
7. Press the Joystick down to confirm.

flip this page to continue

Questions? Call 1-888-436-0657